



Nikon D90 Top Flash Casing Replacement

Prerequisite Only

Written By: Matthew Grotta



INTRODUCTION

Prerequisite Only



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Open the Flash



- Use a plastic opening tool to lift up the flash.

Step 2 — Flash Casing Screws



- Using a PH00 screwdriver, remove the two 5.3 mm Phillips screws from the flash casing.

⚠ Be careful not to strip the screw heads.

Step 3 — Removing the Top Flash Casing



- Use a plastic opening tool and carefully pry open the top casing of the flash.
- Then, lift off the top casing of the flash.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 12:24:45 AM.